



INSTALLATION INSTRUCTIONS

MSD Blaster HVC-2 Coil PN 8253

Parts Included:

- | | |
|-----------------------------------|------------------------|
| 1 - Blaster HVC-2 Coil | 2 - Ring Lug Terminals |
| 4 - Vibration Mounts and Hardware | 2 - Brass Screws |
| 2 - Brass Lock Washers | |

WARNING: Disconnect the battery during installation. When disconnecting the battery, always remove the negative cable first and install it last.

The Blaster HVC-2 Coil is designed to be used with an MSD 6 Series Ignition Control only.

INSTALLATION

1. The Coil can be mounted in any position, but should be away from direct heat sources. Use the Coil Template (page 3) and mark the location of the mounting holes. Use a 3/16" bit to drill the holes.
2. Install the supplied vibration mounts to the coil and install the coil.
3. The MSD Orange wire connects to coil positive (+). Black connects to coil negative (-).

Note: If the wires need to be lengthened, it is recommended to use 14-Gauge wiring for the primary coil wiring.

4. Connect the coil secondary wire to the coil and distributor cap.

WARNING: Very high voltages are present at the coil when the engine is running. Never connect any test equipment or touch the coil while the engine is cranking or running.

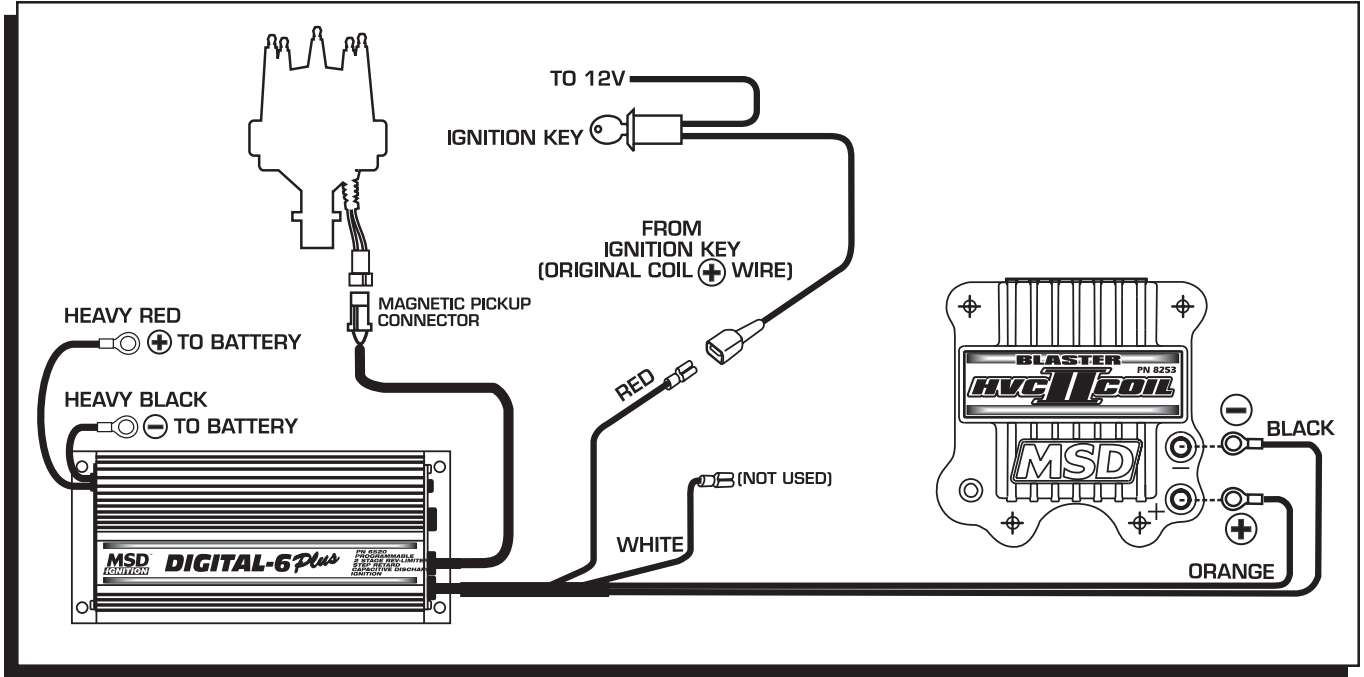


Figure 1 Wiring to an MSD Digital-6 Plus and MSD Distributor.

WARNING: Very high voltages are present at the coil when the engine is running. Never connect any test equipment or touch the coil while the engine is cranking or running.


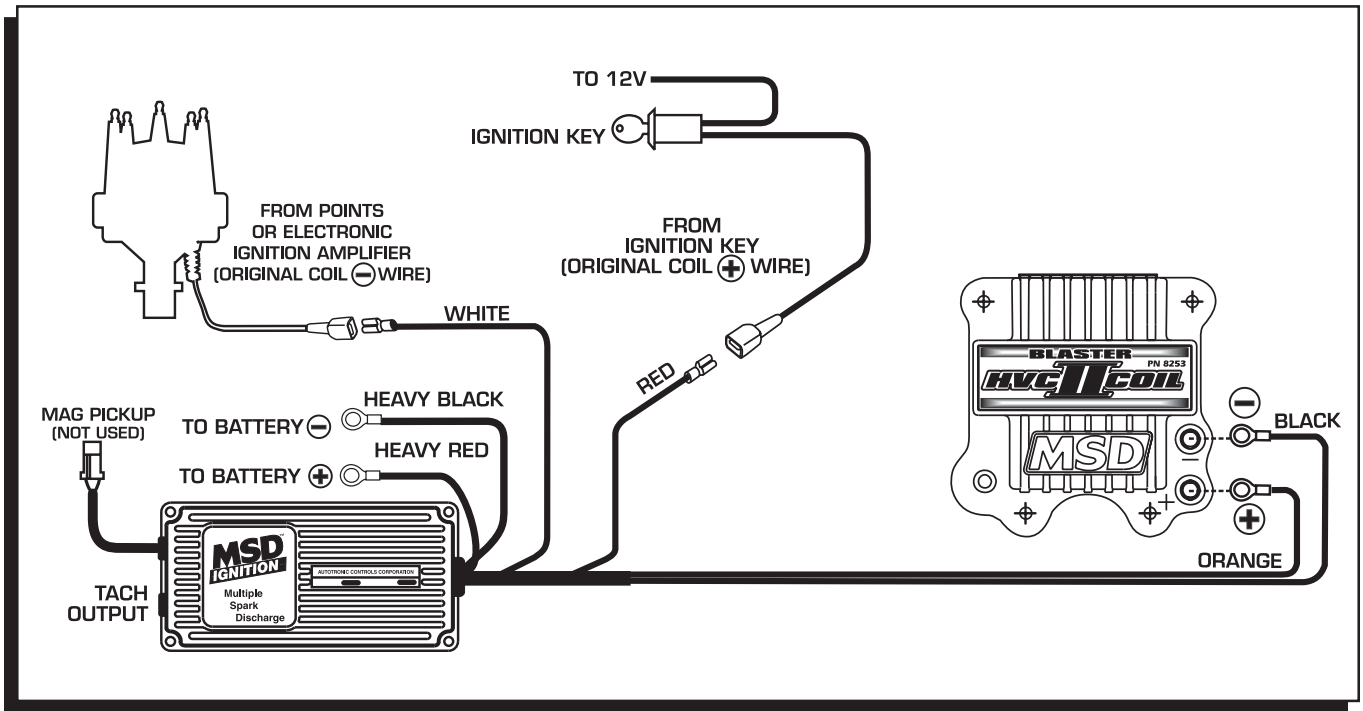


Figure 2 Wiring to an MSD Ignition with a Points/Amplifier Distributor.

MOUNTING TEMPLATE



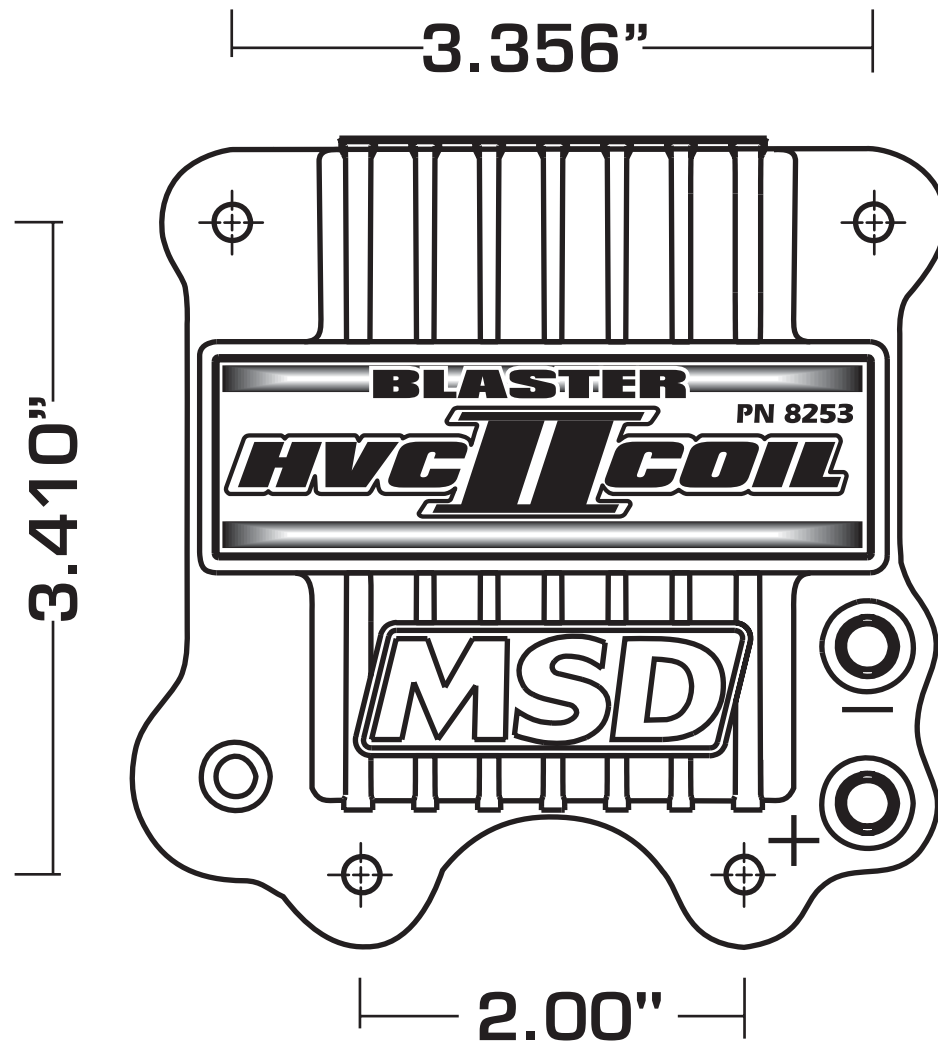

INSTALLATION INSTRUCTIONS

Service

In case of malfunction, this MSD component will be repaired free of charge according to the terms of the warranty. When returning MSD components for service, Proof of Purchase must be supplied for warranty verification. After the warranty period has expired, repair service is charged based on a minimum and maximum charge.

Send the unit prepaid with proof of purchase to the attention of: **Customer Service Department, Autotronic Controls Corporation, 12120 Esther Lama, Suite 114, El Paso, Texas 79936.**

When returning the unit for repair, leave all wires at the length in which you have them installed. Be sure to include a detailed account of any problems experienced, and what components and accessories are installed on the vehicle.

The repaired unit will be returned as soon as possible after receipt, COD for any charges. (Ground shipping is covered by warranty). All units are returned regular UPS unless otherwise noted. For more information, call the MSD Customer Service Line (915) 855-7123. MSD technicians are available from 8:00 a.m. to 5:00 p.m. Monday - Friday (Mountain Time).

Limited Warranty

Autotronic Controls Corporation warrants MSD Ignition products to be free from defects in material and workmanship under normal use and if properly installed for a period of one year from date of purchase. If found to be defective as mentioned above, it will be replaced or repaired if returned prepaid along with proof of date of purchase. This shall constitute the sole remedy of the purchaser and the sole liability of Autotronic Controls Corporation. To the extent permitted by law, the foregoing is exclusive and in lieu of all other warranties or representations whether expressed or implied, including any implied warranty of merchantability or fitness. In no event shall Autotronic Controls Corporation be liable for special or consequential damages.